

---

# User manual MB2-2F

Frequency input: 0.01 Hz up 999.99 kHz

Connection for NAMUR-, NPN-, PNP- and TTL-sensors



## Technical features:

- red display of -19999...99999 digits
- red 55 points bargraph
- adjustable bar or dot operation or operation with permanent display of center point
- min/max memory
- display adjustment via frequency presetting or directly on the sensor signal
- 30 adjustable setpoints
- display flashing at threshold value exceedance/undercut
- Schmitt-Trigger-input
- zero-key for triggering of Hold, Tara
- permanent min/max-value recording
- digital frequency filter for contact bounce suppression and interference suppression
- frequency filter with varying pulse control factor
- volume metering (totaliser) for frequencies up to 1kHz (accurate to a pulse)
- mathematical function like reciprocal value, square root, rounding
- sliding averaging with an optional dynamic display filter
- setpoint generator
- brightness control
- programming interlock via access code
- protection class IP65 at the front side
- plug-in screw terminal
- sensor supply
- galvanic isolated digital input
- 2 relay output
- optional analog output
- optional: RS232 or RS485 interfaces
- accessories: PC-based configuration-kit PM-TOOL incl. CD & USB adapter for devices without keypad and for a simple adjustment of standard devices.

## Identification

STANDARD TYPES	ORDER NUMBER
Frequency Housing size: 96x96 mm	<b>MB2-2FR5RR.0307.S72AD</b> <b>MB2-2FR5RR.0307.W72AD</b>

**Options – breakdown of order code:**

[illegible]

**Please state physical unit by order, e.g. U/min.**

---

## Contents

<b>1.</b>	<b>Brief description</b>	<b>2</b>
<b>2.</b>	<b>Assembly</b>	<b>3</b>
<b>3.</b>	<b>Electrical connection</b>	<b>4</b>
<b>4.</b>	<b>Description of function and operation</b>	<b>6</b>
	<b>4.1. Programming software PM-TOOL</b>	<b>8</b>
<b>5.</b>	<b>Setting up the device</b>	<b>8</b>
	<b>5.1. Switching on</b>	<b>8</b>
	<b>5.2. Standard parameterisation (flat operation level)</b>	<b>8</b>
	Value assignment for the triggering of the signal input of the digital display and bargraph display	
	<b>5.3. Programming interlock „RUN“</b>	<b>12</b>
	Activation/Deactivation of the programming interlock or change into professional operation level respectively back into flat operation level	
	<b>5.4. Extended parameterisation (professional operation level)</b>	<b>14</b>
	<b>5.4.1. Signal input parameters „INP“</b>	<b>14</b>
	Value assignment for the triggering of the signal input incl. linearisation of the digital display and the bargraph display	
	<b>5.4.2. General device parameters „FCT“</b>	<b>18</b>
	Superior device functions like Hold, Tara, min/max permanent, setpoint value function / nominal value function, averaging, brightness control, as well as the control of the digital input and keyboard layout	
	<b>5.4.3. Bargraph functions „BAR“</b>	<b>23</b>
	Assignment of the bargraph to superior functions like min/max, totaliser, Hold or sliding averaging	
	<b>5.4.4. Safety parameters „COD“</b>	<b>25</b>
	Assignment of user and master code for locking respectively for access to defined parameters like e.g. analog output and alarms, etc.	
	<b>5.4.5. Serial parameters „SER“</b>	<b>26</b>
	Parameters for the definition of the interface	
	<b>5.4.6. Analog output parameters „OUT“</b>	<b>27</b>
	Analog output functions	
	<b>5.4.7. Relay functions „REL“</b>	<b>29</b>
	Parameters for the definition of the setpoints	
	<b>5.4.8. Alarm parameters „AL1...AL4“</b>	<b>31</b>
	Trigger and dependencies of the alarms	
	<b>5.4.9. Totaliser (Volume metering) „TOT“</b>	<b>33</b>
	Parameters for the calculation of the sum function	
<b>6.</b>	<b>Reset to factory settings</b>	<b>31</b>
	Reset parameters to delivery state	
<b>7.</b>	<b>Alarms / Relay</b>	<b>32</b>
	Functional principle of the switching outputs	
<b>8.</b>	<b>Interfaces</b>	<b>36</b>
	Connection RS232 and RS485	
<b>9.</b>	<b>Programming examples</b>	<b>37</b>
	Examples of use e.g. the calculation of the input frequency or the adjustment of unknown rotational speed	
<b>10.</b>	<b>Technical data</b>	<b>39</b>
<b>11.</b>	<b>Safety advices</b>	<b>40</b>
<b>12.</b>	<b>Error elimination</b>	<b>41</b>


## 1. Brief description

The panel meter instrument **MB2-2F** is a 5-digit digital display with a 55 points bargraph display and two galvanic isolated setpoints; designed for pulse signals respectively 2- and 3-wire sensors. The configuration happens via four keys at the front. The integrated programming interlock prevents unrequested changes of parameters and can be unlocked again with an individual code. Optional the following functions are available: a supply for the sensor, a digital input for triggering of Hold (Tara), two analog outputs and interfaces for further evaluating in the unit. The electrical connection is done via plug-in terminals on the back side.

Selectable functions like e.g. the recall of the min/max-value, an averaging of the measuring signals, a nominal presetting or setpoint presetting, a direct threshold value regulation during operation mode and further measuring setpoints for linearisation, complete the modern device concept.

## 2. Assembly

Please read the *Safety advices* on *page 37* before installation and keep this user manual for future reference.

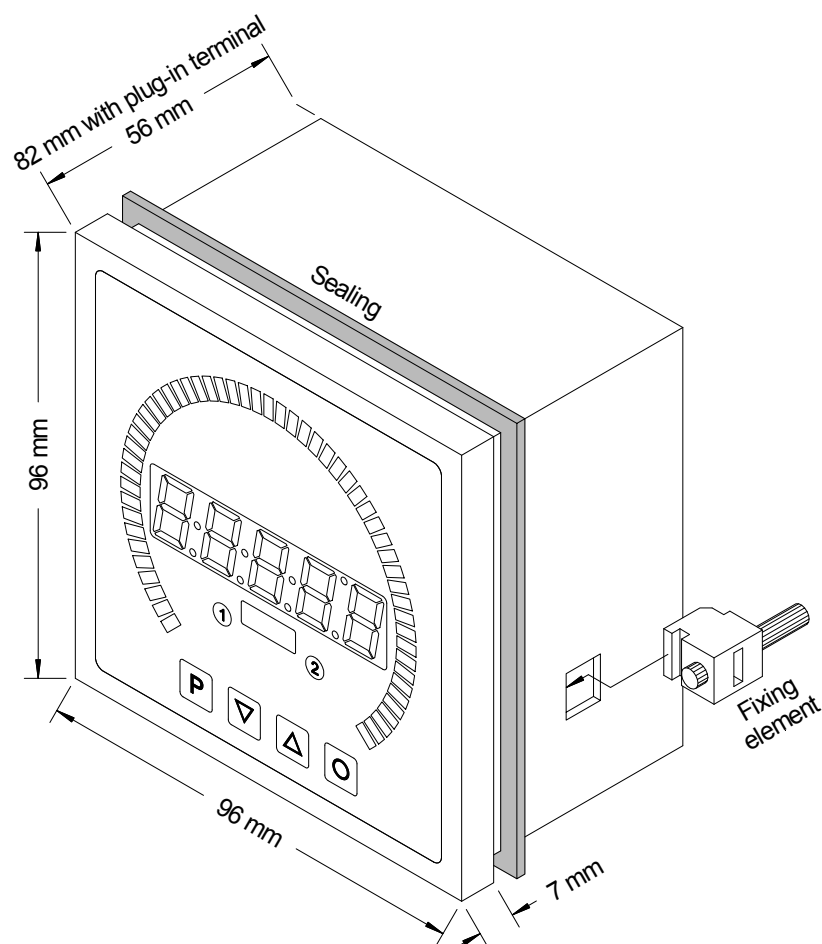



1. After removing the fixing elements, insert the device.
2. Check the seal to make sure it fits securely.
3. Click the fixing elements back into place and tighten the clamping screws by hand. Then use a screwdriver to tighten them another half a turn.

**CAUTION! The torque should not exceed 0.1 Nm!**

**Please state you favorite dimension symbol in your order, they can not be exchanged afterwards!**

### 3. Electrical connection

Type MB2-2FR5RR.0307.S70AD with a supply of 100-240 VAC  
 Type MB2-2FR5RR.0307.W70AD with a supply of 10-40 VDC

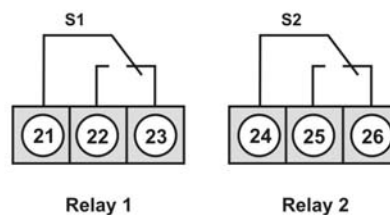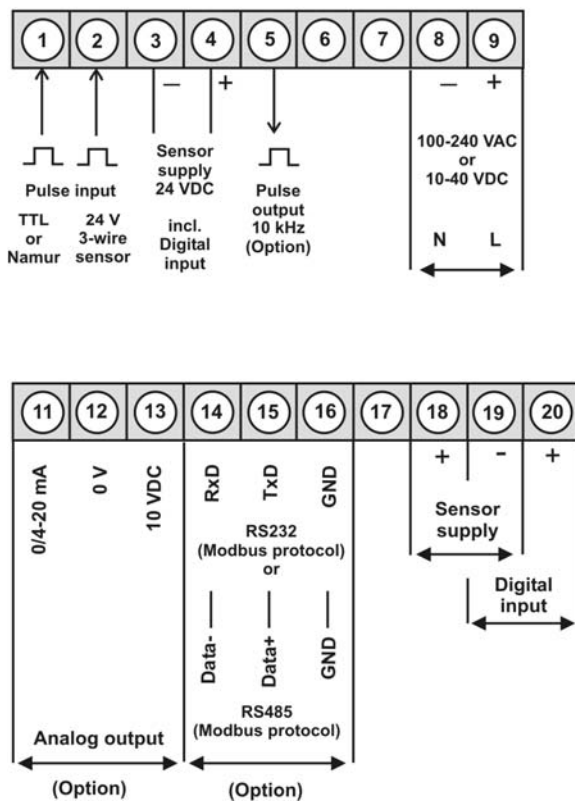


#### Attention!


For devices with sensor supply, terminal clamps 4 and 18, as well as 3 and 19 are connected galvanically in the device.

**MB2-2F-devices** with a frequency input / pulse input


Namur

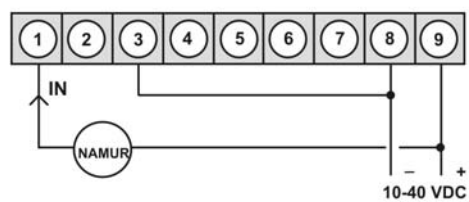


Namur

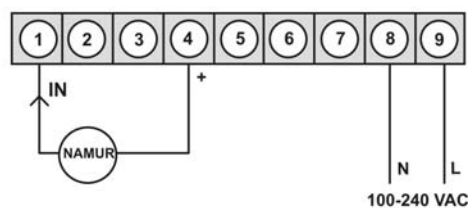


3-wire PNP

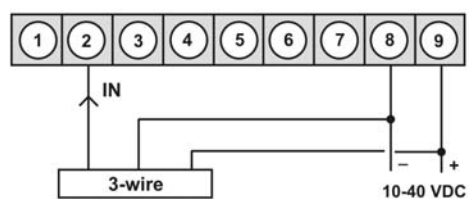


3-wire PNP

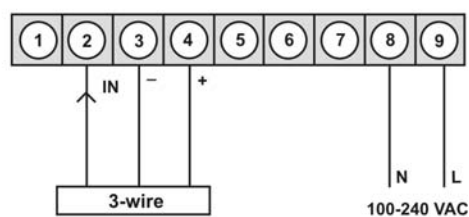

3-wire NPN

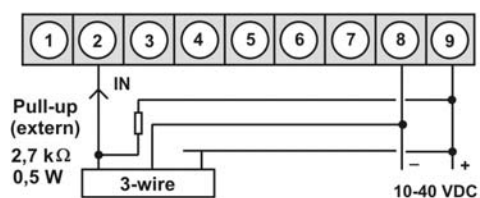

3-wire NPN

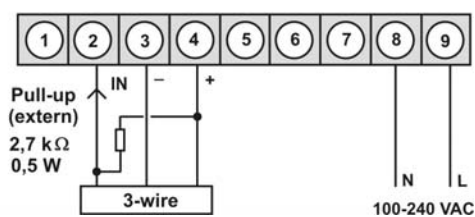

## 4. Description of function and operation

### Operation

The operation is divided into three different levels.

#### Menu level (delivery status)













This level was designed for the standard settings of the device. Only menu items which are sufficient to set the device into operation are displayed. To get into the professional level, run through the menu level and parameterise **PROF** under menu item **RUN**.

#### Menu group level (complete function volume)


Suited for complex applications as e.g. linkage of alarms, setpoint treatment, totaliser function etc. In this level function groups which allow an extended parameterisation of the standard settings are available. To leave the menu group level, run through this level and parameterise **ULOC** under menu item **RUN**.

#### Parameterisation level:

Parameter deposited in the menu item can here be parameterised. Functions, that can be changed or adjusted, are always signalled by a flashing of the display. Settings that are made in the parameterisation level are confirmed with **[P]** and thus saved. Pressing the **[O]-key** leads to a break-off of the value input and to a change into the menu level. All adjustments are saved automatically by the device and changes into operating mode, if no further key operation is done within the next 10 seconds.

Level	Key	Description
Menu level		Change to parameterisation level and deposited values.
	 	Keys for up and down navigation in the menu level.
		Change into operation mode.
Parameterisation level		To confirm the changes made at the parameterization level.
	 	Adjustment of the value / the setting.
		Change into menu level or break-off in value input.
Menu group level		Change to menu level.
	 	Keys for up and down navigation in the menu group level.
		Change into operation mode or back into menu level.

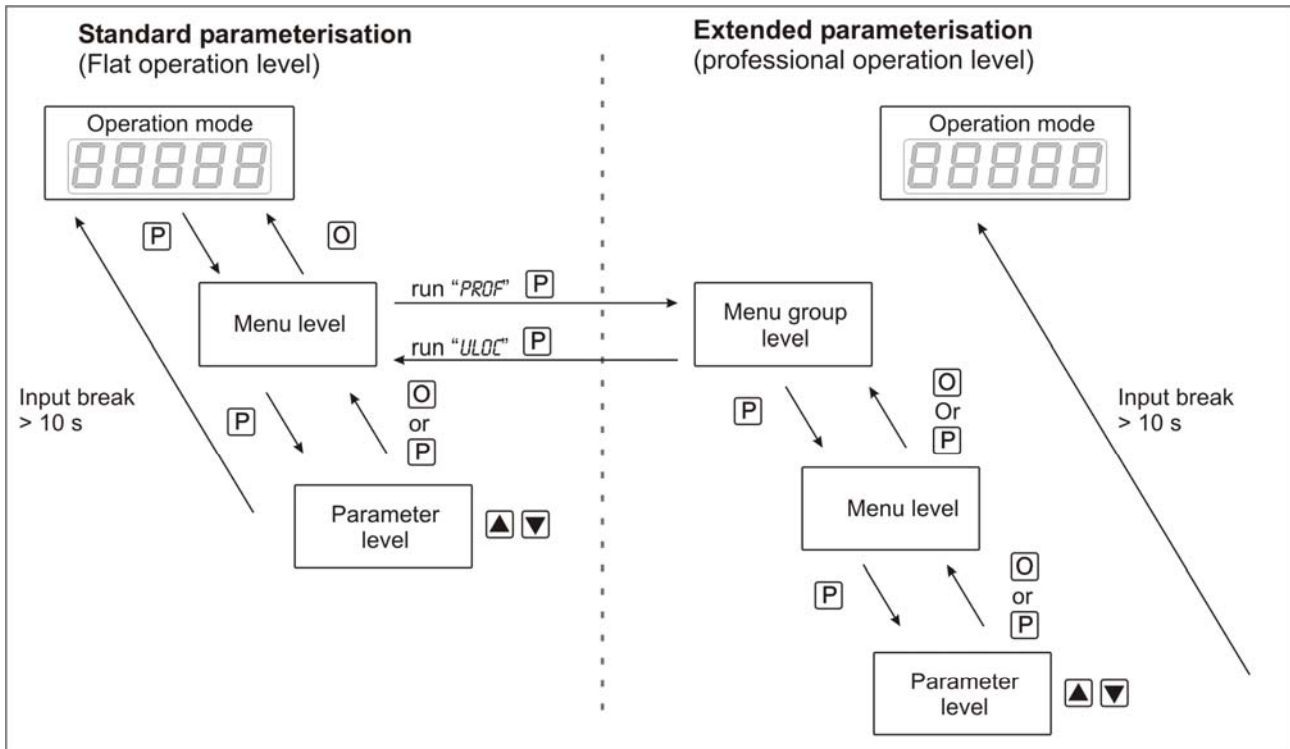

**Funktion chart:****Underline:**

- |                   |                              |
|-------------------|------------------------------|
| <b>P</b> Takeover | <b>▲</b> Value selection (+) |
| <b>O</b> Stop     | <b>▼</b> Value selection (-) |

**4.1 Parameterisation software PM-TOOL:**

Part of the PM-TOOL are the software on CD and an USB-cable with device adapter. The connection happens via a 4-pole micromatch-plug on the back side of the device, to the PC-side the connection happens via an USB plug.

System requirements: PC incl. USB interface  
Software: Windows XP, Windows VISTA

With this tool the device configuration can be generated, omitted and saved on the PC. The parameters can be changed via the easy to handle program surface, whereat the operating mode and the possible selection options can be preset by the program.

## 5. Setting up the device

### 5.1. Switching-on




Once the installation is complete, start the device by applying the voltage supply. Before, check once again that all electrical connections are correct.



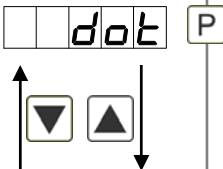

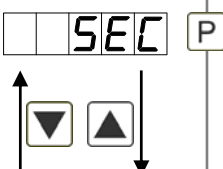

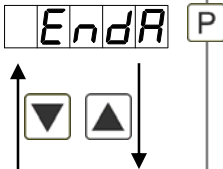

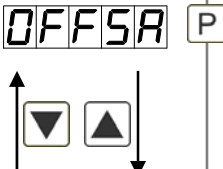

#### Starting sequence





















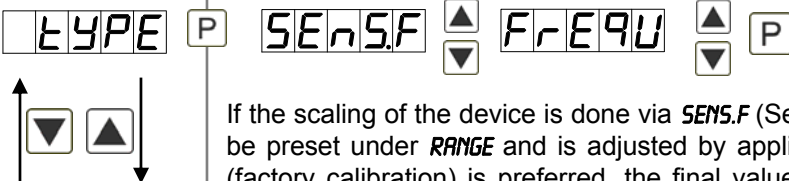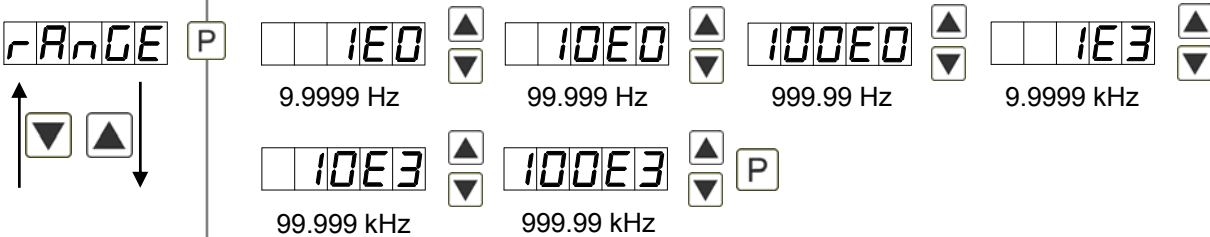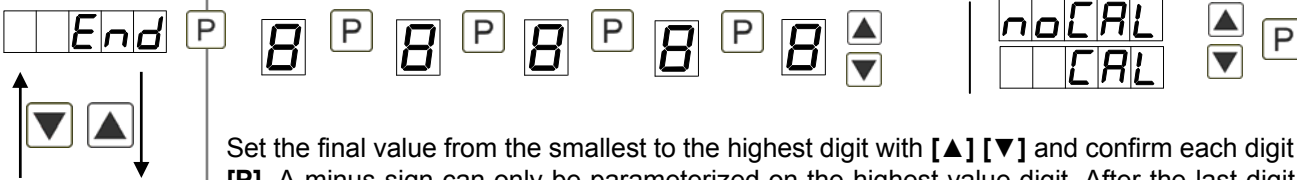

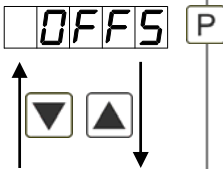













































For 1 second during the switching-on process, the segment test (8 8 8 8 8) is displayed, followed by an indication of the software type and, after that, also for 1 second, the software version. After the starting sequence, the device switches to operation/display mode.



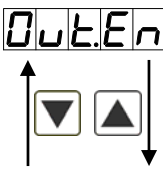

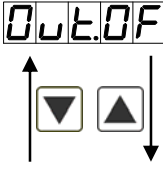

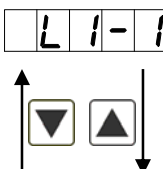

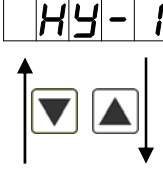

### 5.2. Standard parameterisation: (flat operation level)

















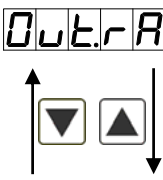


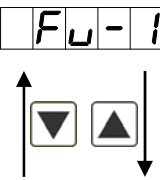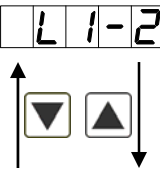

To parameterize the display, press the **[P]**-key in operating mode for 1 second. The display then changes to the menu level with the first menu item **TYPE**.

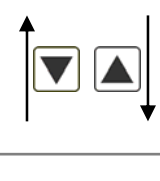

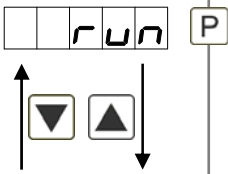

Menu level	Parameterisation level
	<p><b>Selection of the input signal, TYPE:</b> Default: <b>FREQU</b></p> <p>If the scaling of the device is done via <b>SENS.F</b> (Sensor calibration), the frequency range needs to be preset under <b>RANGE</b> and is adjusted by application of the final value / initial value. If <b>FREQU</b> (factory calibration) is preferred, the final value needs to be entered under <b>END</b> and the final frequency needs to be entered under <b>ENDR</b>. Under <b>OFFS</b> the initial value needs to be entered and under <b>OFFSR</b> the initial frequency. There is no application of the measuring signal. Confirm the selection with <b>[P]</b> and the display switches back to menu level.</p>
	<p><b>Setting the end value of the measuring range, END:</b> Default: <b>100E3</b></p> <p>Choose between six different frequency ranges. Confirm the selection with <b>[P]</b> and the display switches back to menu level.</p>
	<p><b>Setting the final value of the measuring range, END:</b> Default: <b>10000</b></p> <p>Set the final value from the smallest to the highest digit with <b>[▲]</b> <b>[▼]</b> and confirm each digit with <b>[P]</b>. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level. If <b>SENS</b> was selected as input option, you can only select between <b>NOCA</b> and <b>CAL</b>. With <b>NOCA</b>, only the previously set display value is taken over, and with <b>CAL</b>, the device takes over both the display value and the analogue input value.</p>

Menu level	Parameterisation level
	<p><b>Setting the start/offset value of the measuring range, <i>OFFS</i>:</b> Default: 0</p>  <p>Enter the start/offset value from the smallest to the highest digit [▲] [▼] and confirm each digit with [P]. After the last digit the display switches back to the menu level. If <i>SENS.F</i> was selected as the input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>
	<p><b>Setting the decimal point, <i>DOT</i>:</b> Default: 0</p>  <p>The decimal point on the display can be moved with [▲] [▼] and confirmed with [P]. The display then switches back to the menu level again.</p>
	<p><b>Setting up the display time, <i>SEC</i>:</b> Default: 1.0</p>  <p>The display time is set with [▲] [▼]. The display moves up in increments of 0.1 up to 1 second and in increments of 1.0 up to 10.0 seconds. Confirm the selection by pressing the [P] button. The display then switches back to the menu level again.</p>
	<p><b>Rescaling the measuring input values, <i>ENDR</i>:</b> Default: 10000</p>  <p>With this function, you can rescale the input value of e.g. 8.000 Hz (works setting) without applying a measuring signal. If sensor calibration has been selected, these parameters are not available.</p>
	<p><b>Rescaling the measuring input values, <i>OFFA</i>:</b> Default: 0</p>  <p>With this function, you can rescale the input value of e.g. 100 Hz (works setting) without applying a measuring signal. If sensor calibration has been selected, these parameters are not available.</p>

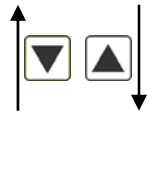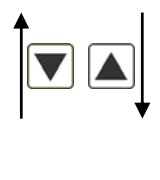Menu level	Parameterisation level
	<p><b>Setting of the pulse delay, <i>DELAY</i>:</b> Default: 0</p> <p>        </p> <p>With the pulse delay of 0–250 seconds (max), frequencies can be collected, which are even smaller than by the predetermined measuring time of the device. If e.g. a delay of 250 seconds is set, it means that the device waits up to 250 seconds for an edge, before it assumes a 0 Hz frequency. Thus frequencies up to 0.004 Hz can be collected.</p>
	<p><b>Adjustment of the optimum digital frequency filter, <i>FI.FRQ</i>:</b> Default: NO</p> <p>           </p> <p>        </p> <p>If the optional filter is not activated by the adjustment „NO“, frequencies are ignored by the adjusted frequency filter. Act on the assumption that the pulse-duty factor is 1:1. Accordingly the minimal pulse duration is derived from the half of the time of oscillation. Use a filter of 10 Hz or 20 Hz for contact bounce suppression.</p>
	<p><b>Setting up the final value of the bargraph, <i>BA.END</i>:</b> Default: 1000</p> <p>              </p> <p>Set the final value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level.</p>
	<p><b>Setting up the initial value of the bargraph, <i>BA.OFF</i>:</b> Default: 0</p> <p>              </p> <p>Set the initial value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level.</p>
	<p><b>Selection of the bargraph functions, <i>BA.FCT</i>:</b> Default: BAR.FD</p> <p>           </p> <p>    </p> <p>The bargraph can be displayed with the following possibilities: bars from left to right (top to bottom) or bars from right to left (bottom to top), bars from the middle, a dot display of the bargraph or a dot display with a permanently displayed midpoint. Confirm the selection by pressing the [P] button. The display then switches back to the menu level again.</p>


Menü-Ebene	Parameter-Ebene
	<p><b>Selection of analog output, <i>OUT.RA</i>:</b> Default: 4-20</p> <p>  </p> <p>Three output signals are available: 0-10 VDC, 0-20 mA and 4-20 mA, with this function, the demanded signal is selected.</p>
	<p><b>Setting up the final value of the analog output, <i>OUT.EN</i>:</b> Default: 10000</p> <p>  </p> <p>The final value is adjusted from the smallest digit to the highest digit with [▲] [▼] and digit by digit confirmed with [P]. A minus sign can only be parameterised on the highest digit. After the last digit, the device changes back into menu level.</p>
	<p><b>Setting up the initial value of the analog output, <i>OUT.OF</i>:</b> Default: 00000</p> <p>  </p> <p>The final value is adjusted from the smallest digit to the highest digit with [▲] [▼] and digit by digit confirmed with [P]. A minus sign can only be parametrised on the highest digit. After the last digit, the device changes back into menu level.</p>
	<p><b>Threshold values / limit values, <i>LI-1</i>:</b> Default: 2000</p> <p>  </p> <p>For both limit values, two different values can be parameterized. With this, the parameters for each limit value are called up one after another.</p>
	<p><b>Hysteresis for limit values, <i>HY-1</i>:</b> Default: 00000</p> <p>  </p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>

Menu level	Parameterisation level
	<p><b>Function if display falls below / exceeds limit value, FU-1:</b> Default: <i>HIGH</i></p> <p>   </p> <p>The limit value undercut can be selected with <i>LOW</i> (LOW = lower limit value) and limit value exceedance can be selected with <i>HIGH</i> (HIGH = upper limit value). If e.g. limit value 1 is on a switching threshold of 100 and occupied with function „<i>HIGH</i>“, the alarm will be activated by reaching the threshold. If the limit value is allocated to „<i>LOW</i>“, an alarm will be activated by undercut of the threshold. <b>See page 29.</b></p>
	<p><b>Threshold values / limit values, LI-2:</b> Default: <i>3000</i></p> <p>     </p> <p>For both limit values, two different values can be parameterized. With this, the parameters for each limit value are called up one after another.</p>
	<p><b>Hysteresis for limit values, HY-2:</b> Default: <i>00000</i></p> <p>     </p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>
	<p><b>Function if display falls below / exceeds limit value, FU-2:</b> Default: <i>HIGH</i></p> <p>   </p> <p>The limit value undercut can be selected with <i>LOW</i> (LOW = lower limit value) and limit value exceedance can be selected with <i>HIGH</i> (HIGH = upper limit value). If e.g. limit value 1 is on a switching threshold of 100 and occupied with function <i>HIGH</i>, the alarm will be activated by reaching the threshold. If the limit value is allocated to <i>LOW</i>, an alarm will be activated by undercut of the threshold.</p>
	<p><b>User code (4-digit number-combination, free available), U.CODE:</b> Default: <i>0000</i></p> <p>     </p> <p>If this code is set (&gt;0000), all parameters are locked, if <i>LOC</i> has been selected before under menu item <i>RUN</i>. By pushing [P] during operation mode for approx. 3 seconds, <i>CODE</i> appears in the display. To get to the unlocked reduced parameter, the user needs to enter the preset <i>U.CODE</i>. This code has to be entered before each parameterisation, until the <i>R.CODE</i> (master code) unlocks all parameters again.</p>

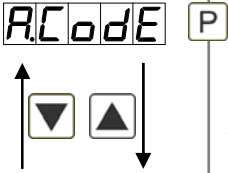Menu level	Parameterisation level
	<p><b>Master code (4-digit number-combination free available), <i>A.CODE</i>:</b> Default: 1234</p>  <p>This code can unlock all parameters, if <i>LOC</i> has been activated before under menu item <i>RUN</i>. By pushing <b>[P]</b> during operation mode for approx. 3 seconds, <i>CODE</i> appears in the display. The user can now reach all parameters by entering <i>A.CODE</i>. Leaving the parameterisation, under menu item <i>RUN</i>, the user can unlock them permanently by choosing <i>ULOC</i> or <i>PROF</i>. So, there is no need for anew code entering, even by pushing <b>[P]</b> during operation mode again.</p>
<b>5.3. Programming interlock „<i>RUN</i>“</b>	
	<p><b>Activation / deactivation of the programming lock or completion of the standard parameterisation with change into menu group level (complete function range), <i>RUN</i>:</b> Default: <i>ULOC</i></p>  <p>Use the navigation keys <b>[▲]</b> <b>[▼]</b> to choose between the deactivated key lock <i>ULOC</i> (works setting) and the activated key lock <i>LOC</i>, or the menu group level <i>PROF</i>. Confirm the selection with <b>[P]</b>. After this, the display confirms the settings with "- - - -" and switches automatically to operating mode. If <i>LOC</i> was selected, the keyboard is locked. To get back into the menu level, press <b>[P]</b> for 3 seconds in operating mode. Now enter the <i>CODE</i> (works setting 1 2 3 4) that appears using <b>[▲]</b> <b>[▼]</b> plus <b>[P]</b> to unlock the keyboard. <i>FAIL</i> appears if the input is wrong.</p> <p>To parameterise further functions <i>PROF</i> needs to be set. The device confirms this setting with „- - - -“, and changes automatically into operation mode. By pressing <b>[P]</b> for approx. 3 seconds in operation mode, the first menu group <i>INP</i> is shown in the display and thus confirms the change into the extended parameterisation. It stays activated as long as <i>ULOC</i> is entered in menu group <i>RUN</i>, thus the display is set back in standard parameterisation again.</p>



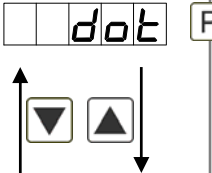
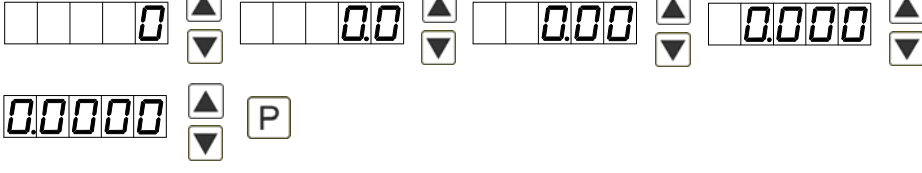
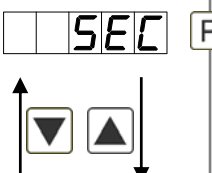

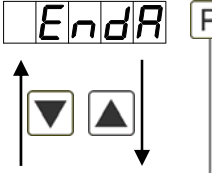

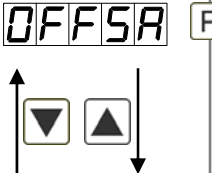

5.4. Extended parameterisation (Professional operation level)





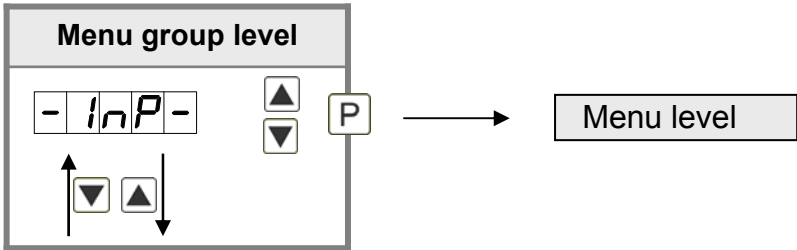











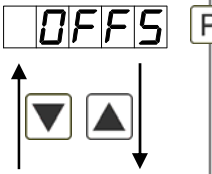










































5.4.1. Signal input parameters






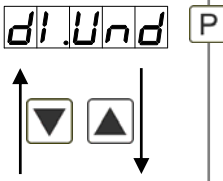

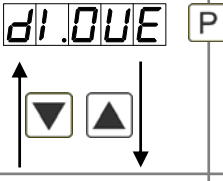

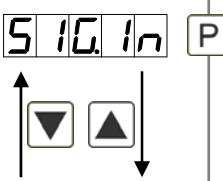

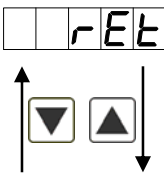


Menu level	Parameterisation level
	<p><b>Selection of the input signal, <i>TYPE</i>:</b> Default: <i>FREQU</i></p> <p></p> <p>If the scaling of the device is done via <i>SENS.F</i> (Sensor calibration), the frequency range needs to be preset under <i>RANGE</i> and is adjusted by application of the final value/initial value. If <i>FREQU</i> (factory calibration) is preferred, the final value needs to be entered under <i>END</i> and the final frequency needs to be entered under <i>ENDF</i>. Under <i>OFFS</i> the initial value needs to be entered and under <i>OFFSA</i> the initial frequency. There is no application of the measuring signal. Confirm the selection with [<b>P</b>] and the display switches back to menu level.</p>
	<p><b>Setting the end value of the measuring range, <i>END</i>:</b> Default: <i>100E3</i></p> <p></p> <p></p> <p></p> <p>Choose between six different frequency ranges. Confirm the selection with [<b>P</b>] and the display switches back to menu level.</p>
	<p><b>Setting the final value of the measuring range, <i>END</i>:</b> Default: <i>10000</i></p> <p></p> <p></p> <p></p> <p>Set the final value from the smallest to the highest digit with [<b>▲</b>] [<b>▼</b>] and confirm each digit with [<b>P</b>]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level. If <i>SENS</i> was selected as input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>













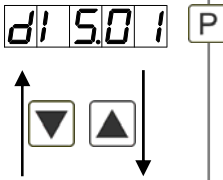


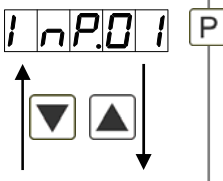












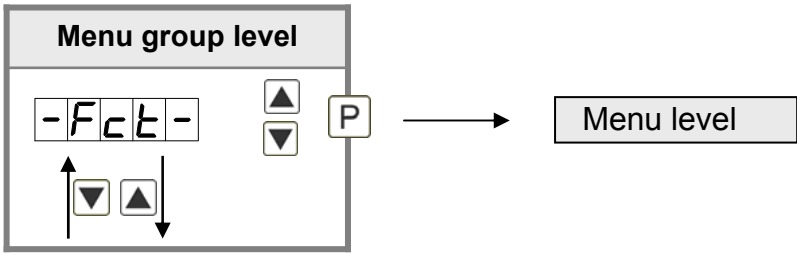




Menu level	Parameterisation level
	<p><b>Setting the start/offset value of the measuring range, <i>OFFS</i>:</b> Default: 0</p>  <p>Enter the start/offset value from the smallest to the highest digit [▲] [▼] and confirm each digit with [P]. After the last digit the display switches back to the menu level. If <i>SENS.F</i> was selected as the input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>
	<p><b>Setting the decimal point, <i>DOT</i>:</b> Default: 0</p>  <p>The decimal point on the display can be moved with [▲] [▼] and confirmed with [P]. The display then switches back to the menu level again.</p>
	<p><b>Setting up the display time, <i>SEC</i>:</b> Default: 1.0</p>  <p>The display time is set with [▲] [▼]. The display moves up in increments of 0.1 up to 1 second and in increments of 1.0 up to 10.0 seconds. Confirm the selection by pressing the [P] button. The display then switches back to the menu level again.</p>
	<p><b>Rescaling the measuring input values, <i>ENDR</i>:</b> Default: 10000</p>  <p>With this function, you can rescale the input value of e.g. 8.000 Hz (works setting) without applying a measuring signal. If sensor calibration has been selected, these parameters are not available.</p>
	<p><b>Rescaling the measuring input values, <i>OFFA</i>:</b> Default: 0</p>  <p>With this function, you can rescale the input value of e.g. 100 Hz (works setting) without applying a measuring signal. If sensor calibration has been selected, these parameters are not available.</p>



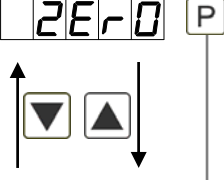

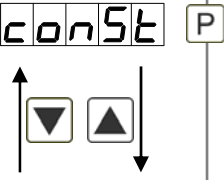

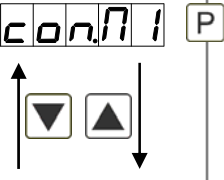

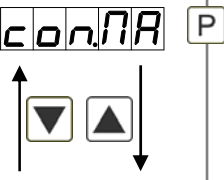

Menu level	Parameterisation level
	<p><b>Setting of the pulse delay, <i>DELAY</i>:</b> Default: 0</p> <p>  P                  P         </p> <p>With the impulse delay of 0–250 seconds (max), frequencies can be collected, that are even smaller than by the predetermined measuring time of the device. If e.g. a delay of 250 seconds is set, this means that the device waits up to 250 seconds for an edge, before it assumes a 0 Hz frequency. Thus frequencies up to 0.004 Hz can be collected.</p>
	<p><b>Adjustment of the optimum digital frequency filter, <i>FI.FREQ</i>:</b> Default: NO</p> <p>  P                                 P         </p> <p>If the optional filter is not activated by the adjustment <i>NO</i>, frequencies are ignored by the adjusted frequency filter. Act on the assumption that the pulse-duty factor is 1:1. Accordingly the minimal pulse duration is derived from the half of the time of oscillation. Use a filter of 10 Hz or 20 Hz for contact bounce suppression.</p>
	<p><b>Adjustment of the pulse-duty factor at activated digital filter, <i>FI.RAT</i>:</b> Default: 1</p> <p>  P                     P         </p> <p>Adjustment of the desired pulse-duty factor for pulse duration and pulse interruption. Like this, a special pulse behaviour can be adjusted.</p>
	<p><b>Setting up the tare/offset value, <i>TARA</i>:</b> Default: 0</p> <p>  P             P             P             P             P               P         </p> <p>The given value is added to the linearized value. In this way, the characteristic line can be shifted by the selected amount.</p>
	<p><b>Number of additional setpoints, <i>SPCT</i>:</b> Default: 00</p> <p>  P                  P         </p> <p>30 additional setpoints can be defined to the initial- and final value, so linear sensor values are not linearised. Only activated setpoint parameters are displayed.</p>

Menu level	Parameterisation level
	<p><b>Display values for setpoints, DIS.01 ... DIS.30:</b></p> <div>   </div> <p>Under this parameter setpoints are defined according to their value. At the sensor calibration, like at final value/offset, one is asked at the end if a calibration shall be activated.</p>
	<p><b>Analog values for setpoints, INP.01 ... INP.30:</b></p> <div>  </div> <p>These setpoints are displayed at works setting (4-20 mA) only. Here, demanded analog values can be chosen freely. The input of steadily rising analog values needs to be done self-contained.</p>
	<p><b>Display underflow, DI.UND:</b> Default: -9999</p> <div>  </div> <p>With this function the device undercut (____) can be defined on a definite value. Exception is input type <b>4-20 mA</b>, it already shows undercut at a signal &lt;1 mA, so a sensor failure is marked.</p>
	<p><b>Display overflow, DI.OUE:</b> Default: 99999</p> <div>  </div> <p>With this function the display overflow (-----) can be defined on a definite value.</p>
	<p><b>Input variable of process value, SIG.IN:</b> Default: <i>A.MERS</i></p> <div>  </div> <p>With this parameter the device can be controlled via the analog input signals <i>A.MERS</i> = <i>SENS.F</i> / <i>FRESU</i> or via the digital signals of the interface <i>n.BUS</i> = RS232/RS485 (modbus protocol). With [P] the selection is confirmed and the device changes into menu level.</p>
	<p><b>Back to menu group level, RET:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „-INP-“.</p>

5.4.2. General device parameters








Menu level	Parameterisation level
<div></div> <div></div> <div></div>	<p><b>Display time, <i>DISC</i>:</b> Default: 01.0</p> <div>  then   </div> <p>The display is set up with [▲] [▼]. Thereby you switch until 1 second in 0.1 steps and until 10.0 seconds in 1.0-steps. With [P] the selection is confirmed and the device changes into menu level.</p>
<div></div> <div></div> <div></div>	<p><b>Rounding of display values, <i>ROUND</i>:</b> Default: 00001</p> <div>    </div> <p>This function is for instable display values, where the display value is changed in increments of 1, 5, 10 or 50. This does not affect the resolution of the optional outputs. With [P] the selection is confirmed and the device changes into menu level.</p>
<div></div> <div></div> <div></div>	<p><b>Arithmetic, <i>ARITH</i>:</b> Default: NO</p> <div>    </div> <p>Reciprocal      Root extraction      Square</p> <p>With this function the calculated value, not the measuring value, is shown in the display. With <b>NO</b>, no calculation is deposited. With [P] the selection is confirmed and the device changes into menu level.</p>
<div></div> <div></div> <div></div>	<p><b>Sliding average determination, <i>AVG</i>:</b> Default: 1.0</p> <div>  </div> <p>Here, the number of the meterings that need to be averaged is preset. The time of averaging results of the product of measuring time <b>SEC</b> and the averaged metering <b>AVG</b>. With the selection of <b>AVG</b> in the menu level <b>DISPL</b>, the result will be shown in the display and evaluated via the alarms <b>AL1-AL4</b> or via the analog output <b>OUTPT</b>.</p>

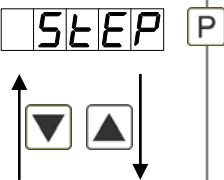Menu level	Parameterisation level
	<p><b>Dynamic for the sliding average determination, <i>STEP</i>:</b> Default: <i>NO</i></p> <p></p> <p>With <i>STEP</i> the sliding average determination can be adjusted dynamically. If 6pro or 12pro was selected, a frequency value with a variance of 6% or 12% of the current display value is taken over directly for the sliding averaging. The display appears to be more dynamic at a fast frequency change, without appearing disturbed by a slightly unsteady frequency.</p>
	<p><b>Zero point slowdown, <i>ZERO</i>:</b> Default: <i>00</i></p> <p></p> <p>At the zero point slowdown, a value range around the zero point can be preset, so the display shows a zero. If e.g. a 10 is set, the display would show a zero in the value range from -10 to +10; below continue with -11 and beyond with +11. The maximum adjustable range of value is 99.</p>
	<p><b>Definite constant value, <i>CONST</i>:</b> Default: <i>0</i></p> <p></p> <p>The constant value can be evaluated via the alarms or via the analog output, like the current measurand. The decimal place cannot be changed for this value and is taken over by the current measurand. Like this a setpoint generator can be realised via the analog output by this value. Furthermore it can be used for calculating the difference. At this the constant value is subtracted from the current measurand and the difference is evaluated in the alerting or by the analog output. Thus regulations can be displayed quite easily.</p>
	<p><b>Minimum constant value, <i>CON.MI</i>:</b> Default: <i>-9999</i></p> <p></p> <p>The minimum constant value is adjusted from the smallest to the highest digit with the navigation keys [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be adjusted on the highest digit. After the last digit the display changes back into menu level.</p>
	<p><b>Maximum constant value, <i>CON.MA</i>:</b> Default: <i>99999</i></p> <p></p> <p>The maximum constant value is adjusted from the smallest to the highest digit with the navigation keys [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be adjusted on the highest digit. After the last digit the display changes back into menu level.</p>


Menu level	Parameterisation level
<div data-bbox="124 436 295 488">di SPL</div> <div data-bbox="316 443 347 481">P</div> <div data-bbox="135 504 279 604"> <div>↑</div> <div>▼</div> <div>▲</div> <div>↓</div> </div>	<p data-bbox="352 336 526 392"><b>Display, <i>DISPL</i>:</b> Default: <i>ACTUA</i></p> <div data-bbox="383 425 1404 593"> <div>ActUA</div> <div>▲</div> <div>▼</div> <div>minUA</div> <div>▲</div> <div>▼</div> <div>maxUA</div> <div>▲</div> <div>▼</div> <div>total</div> <div>▲</div> <div>▼</div> <div>Hold</div> <div>▲</div> <div>▼</div> <div>AUG</div> <div>▲</div> <div>▼</div> <div>const</div> <div>▲</div> <div>▼</div> <div>dIFF</div> <div>▲</div> <div>▼</div> <div>P</div> </div> <p data-bbox="352 649 1481 772">With this function the current measuring value, min/max value, totaliser value, the process-controlled hold value, the sliding average value, the constant value or the difference between the constant value and the current value can be allocated to the display. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>
<div data-bbox="124 891 295 943">LIGHT</div> <div data-bbox="316 898 347 936">P</div> <div data-bbox="135 958 279 1059"> <div>↑</div> <div>▼</div> <div>▲</div> <div>↓</div> </div>	<p data-bbox="352 799 667 855"><b>Brightness control, <i>LIGHT</i>:</b> Default: <i>10</i></p> <div data-bbox="383 884 901 958"> <div>00</div> <div>▲</div> <div>▼</div> <div>15</div> <div>▲</div> <div>▼</div> <div>P</div> </div> <p data-bbox="352 1014 1481 1126">The brightness of the display can be adjusted in 16 levels from 00 = very dark to 15 = very bright via this parameter or alternatively via the navigation keys from the outside. During the start of the device the level that is deposited under this parameter will always be used, even though the brightness has been changed via the navigation keys <b>[▲]</b> <b>[▼]</b> in the meantime.</p>
<div data-bbox="124 1254 295 1305">FLASH</div> <div data-bbox="316 1261 347 1299">P</div> <div data-bbox="135 1321 279 1422"> <div>↑</div> <div>▼</div> <div>▲</div> <div>↓</div> </div>	<p data-bbox="352 1146 641 1202"><b>Display flashing, <i>FLASH</i>:</b> Default: <i>NO</i></p> <div data-bbox="383 1243 1380 1422"> <div>no</div> <div>▲</div> <div>▼</div> <div>AL-1</div> <div>▲</div> <div>▼</div> <div>AL-2</div> <div>▲</div> <div>▼</div> <div>AL.12</div> <div>▲</div> <div>▼</div> <div>AL-3</div> <div>▲</div> <div>▼</div> <div>AL-4</div> <div>▲</div> <div>▼</div> <div>AL.34</div> <div>▲</div> <div>▼</div> <div>ALAL</div> <div>▲</div> <div>▼</div> <div>P</div> </div> <p data-bbox="352 1467 1481 1523">A display flashing can be added as additional alarm function either to single or to a combination of off-limit condition. With <i>NO</i>, no flashing is allocated.</p>

Menu level	Parameterisation level												
<div><div>LAST</div><div>P</div><div><div><div>↑</div><div>▼</div></div><div><div>▲</div><div>↓</div></div></div></div>	<p><b>Assignment (deposit) of key functions, <i>TAST</i>:</b> Default: <i>NO</i></p> <table><tr><td><div><div>EHTr</div><div>▲</div><div>▼</div></div></td><td><div><div>LI.12</div><div>▲</div><div>▼</div></div></td><td><div><div>LI.34</div><div>▲</div><div>▼</div></div></td><td><div><div>TARrA</div><div>▲</div><div>▼</div></div></td></tr><tr><td><div><div>SEt.tA</div><div>▲</div><div>▼</div></div></td><td><div><div>tOt.tAL</div><div>▲</div><div>▼</div></div></td><td><div><div>tOt.tRE</div><div>▲</div><div>▼</div></div></td><td><div><div>EHT.rE</div><div>▲</div><div>▼</div></div></td></tr><tr><td><div><div>ActUA</div><div>▲</div><div>▼</div></div></td><td><div><div>LIGHt</div><div>▲</div><div>▼</div></div></td><td><div><div>no</div><div>▲</div><div>▼</div></div></td><td><div><div>P</div></div></td></tr></table> <p>For the operation mode, special functions can be deposited on the navigation keys [▲] [▼]. In particular this function is made for devices in housing size 48x24mm which do not have a 4th key ([O]-key). If the min/max-memory was activated by <i>EHTr</i>, all measured min/max-values are saved during operation and can be recalled via the navigation keys. The values get lost by restart of the device. If the threshold value correction <i>LI.12</i> or <i>LI.34</i> was chosen, the values of the threshold can be changed during operation without disturbing the operating procedure. With <i>TARrA</i> the device is tared to zero and saved permanently as offset. The device confirms the correct taring by showing <i>00000</i> in the display. <i>SEt.tA</i> switches into the offset value and can be changed via the navigation keys [▲] [▼]. Via <i>tOt.tAL</i> the current value of the totaliser can be displayed for approx. 7 seconds, after this the device changes back on the parameterised display value. If <i>tOt.tRE</i> was deposited, the totaliser can be set back by pressing the navigation keys [▲] [▼], the device acknowledges this with <i>00000</i> in the display. The configuration of <i>EHT.rE</i> deletes the min/max-memory. Under <i>ActUA</i> the measurand is shown for approx. 7 seconds, after this the display returns to the parameterised display value. If <i>ABS.UA</i> (absolute value) was selected, the display shows the value that has been measured since voltage connection, without consideration of a previous taring. If <i>NO</i> is selected, the navigation keys are without any function in the operation mode.</p>	<div><div>EHTr</div><div>▲</div><div>▼</div></div>	<div><div>LI.12</div><div>▲</div><div>▼</div></div>	<div><div>LI.34</div><div>▲</div><div>▼</div></div>	<div><div>TARrA</div><div>▲</div><div>▼</div></div>	<div><div>SEt.tA</div><div>▲</div><div>▼</div></div>	<div><div>tOt.tAL</div><div>▲</div><div>▼</div></div>	<div><div>tOt.tRE</div><div>▲</div><div>▼</div></div>	<div><div>EHT.rE</div><div>▲</div><div>▼</div></div>	<div><div>ActUA</div><div>▲</div><div>▼</div></div>	<div><div>LIGHt</div><div>▲</div><div>▼</div></div>	<div><div>no</div><div>▲</div><div>▼</div></div>	<div><div>P</div></div>
<div><div>EHTr</div><div>▲</div><div>▼</div></div>	<div><div>LI.12</div><div>▲</div><div>▼</div></div>	<div><div>LI.34</div><div>▲</div><div>▼</div></div>	<div><div>TARrA</div><div>▲</div><div>▼</div></div>										
<div><div>SEt.tA</div><div>▲</div><div>▼</div></div>	<div><div>tOt.tAL</div><div>▲</div><div>▼</div></div>	<div><div>tOt.tRE</div><div>▲</div><div>▼</div></div>	<div><div>EHT.rE</div><div>▲</div><div>▼</div></div>										
<div><div>ActUA</div><div>▲</div><div>▼</div></div>	<div><div>LIGHt</div><div>▲</div><div>▼</div></div>	<div><div>no</div><div>▲</div><div>▼</div></div>	<div><div>P</div></div>										

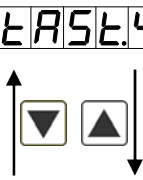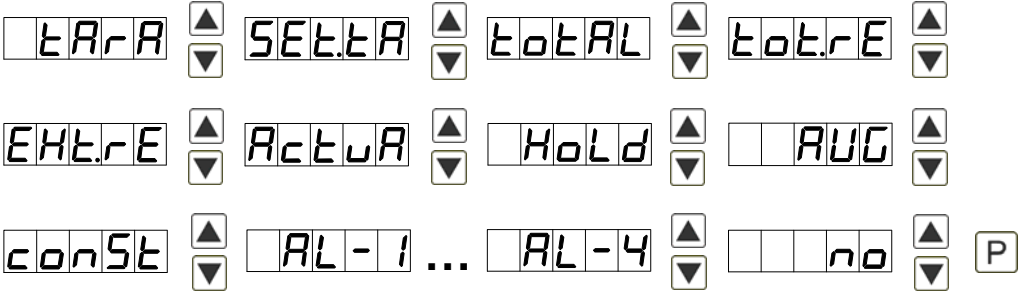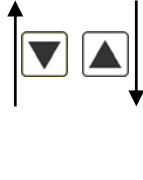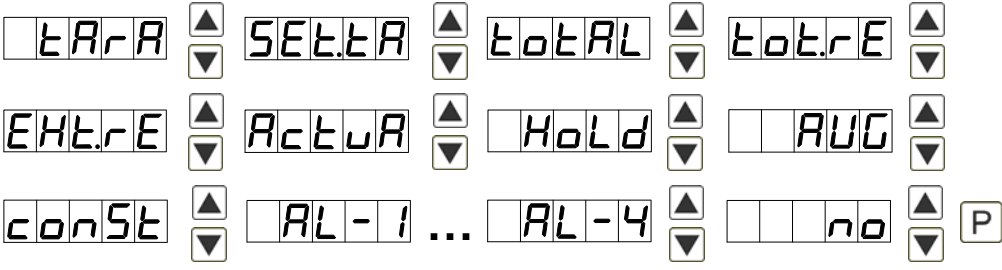







Menu level	Parameterisation level
	<p><b>Special function [O]-key, <i>TAST.4</i>:</b> Default: <i>NO</i></p> <div data-bbox="384 432 1406 723">  </div> <p>For the operation mode, special functions can be deposited on the [O]-key. This function is activated by pressing the key. With <i>TARA</i> the device is set temporarily on a parameterised value. The device acknowledges the correct taring with showing <i>00000</i> in the display. <i>SET.TA</i> adds a defined value on to the currently displayed value. Via <i>TOTAL</i> the current value of the totaliser can be displayed for approx. 7 seconds, after this the device switches back on the parameterised display value. If <i>TOT.RE</i> was deposited, the totaliser can be set back by pressing the navigation keys [▲] [▼], the device acknowledges this with showing <i>00000</i> in the display. <i>EHT.RE</i> deletes the min/max-memory. If <i>HOLD</i> has been selected, the moment can be hold constant by pressing the [O]-key and is updated by releasing the key. <b>Advice:</b> <i>HOLD</i> is activated only, if <i>HOLD</i> was selected under parameter <i>DISPL. ACTUA</i> shows the measuring value for approx. 7 seconds, after this the device switches back on the parameterised display value. The same goes for <i>AVG</i>, here the sliding average values will be displayed. The constant value <i>CONST</i> can be recalled via the digital input, or changed digit per digit. At <i>AL-1...AL-4</i> an output can be set and therewith e.g. a setpoint adjustment can be done. If <i>NO</i> is selected, the [O]-key is without any function in the operation mode.</p>
	<p><b>Special function digital input, <i>DIG.IN</i>:</b> Default: <i>NO</i></p> <div data-bbox="384 1328 1390 1597">  </div> <p>In operation mode, the above shown parameters can be laid on the optional digital input, too. Function description see <i>TAST.4</i>.</p>
	<p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „-FCT-“.</p>

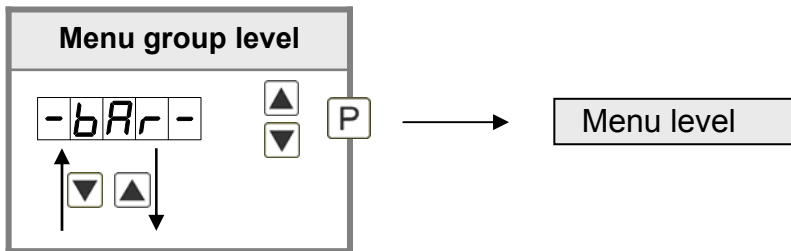


### 5.4.3. Bargraph functions




Menu level	Parameterisation level
	<p><b>Bargraph, <i>BA.SRC</i>:</b> Default: <i>ACTUA</i></p> <p> </p> <p>With this function the following values can be allocated to the display: the current measurand, the min/max value, the totaliser value, the process-controlled hold value, the sliding average value, the constant value or the difference between constant and current value of the bargraph. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>
	<p><b>Adjusting the final value of the bargraph, <i>BA.END</i>:</b> Default: <i>10000</i></p> <p> </p> <p>Set the final value from the smallest to the highest digit with <b>[▲]</b> <b>[▼]</b> and confirm each digit with <b>[P]</b>. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level.</p>
	<p><b>Adjusting the initial value of the bargraph, <i>BA.OFF</i>:</b> Default: <i>0</i></p> <p> </p> <p>Set the initial value from the smallest to the highest digit with <b>[▲]</b> <b>[▼]</b> and confirm each digit with <b>[P]</b>. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level.</p>
	<p><b>Selection of the bargraph functions, <i>BA.FCT</i>:</b> Default: <i>BAR.FO</i></p> <p> </p> <p>The bargraph can be displayed with the following possibilities: bars forwards, bars backwards, bars from the middle, a dot display of the bargraph or a dot display with a permanently displayed midpoint. Confirm the selection by pressing the <b>[P]</b> button. The display then switches back to the menu level again.</p>

Menu level	Parameterisation level
	<p><b>Bargraph alerting, <i>BA.LIM</i>:</b> Default: <i>NO</i></p> <p>   </p> <p>During a breach of the alarms (<i>AL1</i> to <i>AL4</i>), a flashing of the dots can be allocated to the bargraph by selecting <i>FLASH</i>. If <i>NO</i> is adjusted, the bargraph remains statical. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>
	<p><b>Overflow behaviour, <i>BA.OUE</i>:</b> Default: <i>LIMIT</i></p> <p>   </p> <p>The overflow behaviour of the bargraph can be defined to identify and evaluate faulty signals, e.g. via a control system. Overflow <i>LIMIT</i> means the bargraph remains still at adjusted min/max-value. The complete bargraph display flashes during an overflow, if <i>FLASH</i> was selected. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>
	<p><b>Back to menu group level, <i>RET</i>:</b></p> <p>  </p> <p>With <b>[P]</b> the selection is confirmed and the device changes into menu group level „-BAR-“.</p>


### 5.4.4. Safety parameters



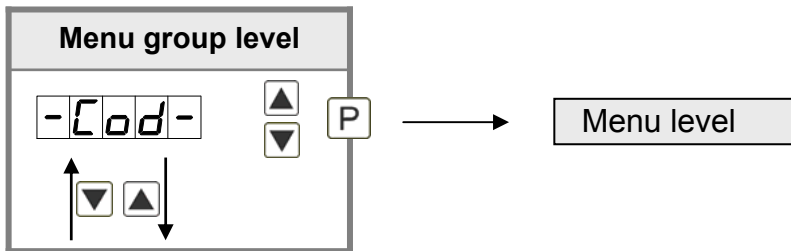

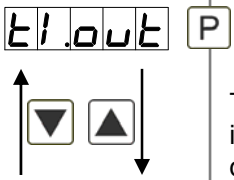

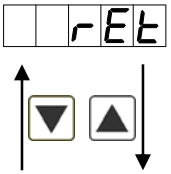


Menu level	Parameterisation level
	<p><b>Setting up the user code, <i>U.CODE</i>:</b> Default: 0000</p> <p>Via this code, reduced sets of parameters <i>OUT.LE</i> and <i>AL.LEV</i> can be unlocked, in case of a locked programming. There is no access to further parameters via this code. The <i>U.CODE</i> can only be changed via the correct input of the <i>R.CODE</i> (master code).</p>
	<p><b>Master code, <i>R.CODE</i>:</b> Default: 1234</p> <p>By entering <i>R.CODE</i> the device will be unlocked and all parameters are released.</p>
	<p><b>Release/lock analog output parameter, <i>OUT.LE</i>:</b> Default: <i>ALL</i></p> <p>Analog output parameter can be locked or released for the user:</p> <ul style="list-style-type: none"> <li>- <i>EN-OF</i>: the initial or final value can be changed in operation mode</li> <li>- <i>OUT.EO</i>: the output signal can be changed from e.g. 0-20 mA to 4-20 mA or 0-10 VDC</li> <li>- <i>ALL</i>: analog output parameters are released</li> <li>- <i>NO</i>: all analog output parameters are locked</li> </ul>
	<p><b>Release/lock alarm parameters, <i>AL.LEV</i>:</b> Default: <i>ALL</i></p> <p>This parameter describes the user release/user lock of the alarm:</p> <ul style="list-style-type: none"> <li>- <i>LIMIT</i>: here only the range of value of the threshold values 1-4 can be changed</li> <li>- <i>ALRM.L</i>: here the range of value and the alarm trigger can be changed</li> <li>- <i>ALL</i>: all alarm parameters are released</li> <li>- <i>NO</i>: all alarm parameters are locked</li> </ul>

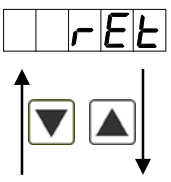
Menu level	Parameterisation level
	<p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With <b>[P]</b> the selection is confirmed and the device changes into menu group level „-<i>COD</i>-“.</p>

#### 5.4.5. Serial parameters



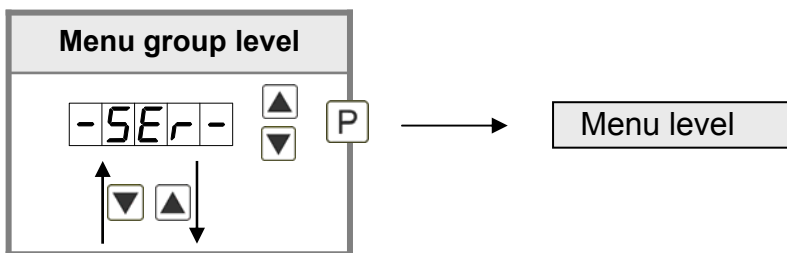


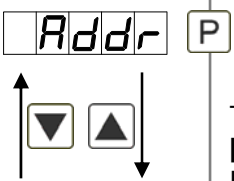
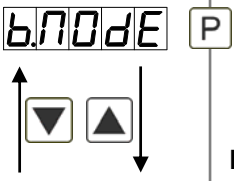

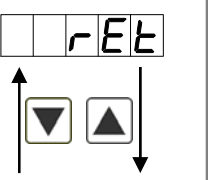


Menu level	Parameterisation level
	<p><b>Device address, <i>ADDR</i>:</b> Default: <i>001</i></p> <p></p> <p>The device address is adjusted from the smallest to the largest digit with the navigation keys <b>[▲]</b> <b>[▼]</b> and confirmed digit per digit with <b>[P]</b>. A device address up to max. 250 is available. Interface data: Baudrate 9600 bit/s, 8 databyte, 1 stopbit, no parity (8n1).</p>
	<p><b>ModBus operation type, <i>B.MODE</i>:</b> Default: <i>ASCII</i></p> <p></p> <p><b>In preparation.</b></p>
	<p><b>Timeout, <i>TOUT</i>:</b> Default: <i>000</i></p> <p></p> <p>The monitoring of the data transfer is parameterised in seconds up to max. 100 seconds; there is no monitoring with an input of <i>000</i>. The timeout is adjusted from the smallest to the largest digit with the navigation keys <b>[▲]</b> <b>[▼]</b> and confirmed digit per digit with <b>[P]</b>. After the last digit the device changes back into menu level.</p>
	<p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With <b>[P]</b> the selection is confirmed and the device changes into menu group level „-<i>SER</i>-“.</p>
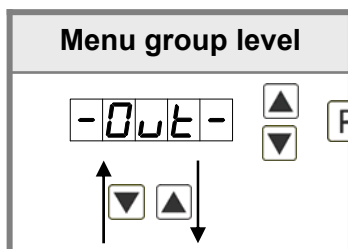
### 5.4.6. Analog output parameters

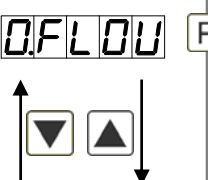

Menu level	Parameterisation level
	<p><b>Selection reference of analog output, <i>OUTPT</i>:</b> Default: <i>ACTUA</i></p> <p> </p> <p>The analog output signal can refer to different functions, in detail these are the current measurand, the min-value, the max-value, the totaliser function/sum function, the constant value or the difference between current measurand and constant value. If <i>HOLD</i> was selected, the signal of the analog output will be kept. It can be continued processing after a deactivation of <i>HOLD</i>. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>
	<p><b>Selection analog output, <i>OUT.RA</i>:</b> Default: <i>4-20</i></p> <p> </p> <p>Three output signals are available: 0-10 VDC, 0-20 mA and 4-20 mA. Select the demanded signal with this function.</p>
	<p><b>Setting the final value of the analog output, <i>OUT.EN</i>:</b> Default: <i>10000</i></p> <p> </p> <p>The final value is adjusted from the smallest to the highest digit with <b>[▲]</b> <b>[▼]</b> and confirmed digit per digit with <b>[P]</b>. A minus sign can only be parameterised on the highest digit. After the last digit the device changes back into menu level.</p>
	<p><b>Setting the initial value of the analog output, <i>OUT.OF</i>:</b> Default: <i>00000</i></p> <p> </p> <p>The initial value is adjusted from the smallest to the highest digit with <b>[▲]</b> <b>[▼]</b> and confirmed digit per digit with <b>[P]</b>. A minus sign can only be parameterised on the highest digit. After the last digit the device changes back into menu level.</p>

Menu level	Parameterisation level
	<p><b>Overflow behaviour, <i>O.FLOU</i>:</b> Default: <i>EDGE</i></p> <p>      </p> <p>   </p> <p>To recognise and evaluate faulty signals, e.g. by a controller, the overflow behaviour of the analog output can be defined. As overflow can be seen either <i>EDGE</i>, that means the analog output runs on the set limits e.g. 4 and 20 mA, or <i>TO.OFF</i> (input value smaller than initial value, analog output switches on e.g. 4 mA), <i>TO.END</i> (higher than final value, analog output switches on e.g. 20 mA). If <i>TO.MIN</i> or <i>TO.MAX</i> is set, the analog output switches on the smallest or highest possible binary value. This means that values of e.g. 0 mA, 0 VDC or values higher than 20 mA or 10 VDC can be reached. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>
	<p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With <b>[P]</b> the selection is confirmed and the device changes into menu group level „-OUT-“.</p>

### 5.4.7. Relay functions

**Menu group level**

-rEL-

▲  
▼

P

→

Menu level

▲  
▼


▲  
▼

Menu level	Parameterisation level												
<div style="border: 1px solid black; padding: 5px; text-align: center;">rEL-1</div> <div style="text-align: center;">       ▲ ▼     </div>	<p><b>Alarm relay 1, REL-1:</b> Default: <i>AL-1</i></p> <div style="display: flex; align-items: center; justify-content: space-between; margin-top: 10px;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">rEL-1</div> <div style="text-align: center;">P</div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">AL-1</div> <div style="margin: 0 10px;">....</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">AL-4</div> <div style="text-align: center;">           ▲ ▼         </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">AL-n1</div> <div style="margin: 0 10px;">....</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">AL-n4</div> <div style="text-align: center;">           ▲ ▼         </div> </div> </div> <div style="display: flex; align-items: center; justify-content: space-between; margin-top: 10px;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">LoGiC</div> <div style="text-align: center;">       ▲ ▼     </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">OFF</div> <div style="text-align: center;">       ▲ ▼     </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">On</div> <div style="text-align: center;">       ▲ ▼     </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">P</div> </div> <p style="font-size: 0.8em; margin-top: 10px;">Each setpoint (optional) can be linked up via 4 alarms (by default). This can either be inserted at activated alarms <i>AL-1/4</i> or deactivated alarms <i>ALn1/4</i>. If <i>LoGiC</i> was selected, logical links are available in the menu level <i>LoG-1</i> and <i>CoM-1</i>. Access to these two menu levels is via <i>LoGiC</i>, at all other selected functions, these two parameters are overlapped. Via <i>On/Off</i> the setpoints can be activated/deactivated, in this case the output and the setpoint display are set/not set on the front of the device. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>												
<div style="border: 1px solid black; padding: 5px; text-align: center;">LoG-1</div> <div style="text-align: center;">       ▲ ▼     </div>	<p><b>Logic relay 1, LoG-1</b> Default: <i>OR</i></p> <div style="display: flex; align-items: center; justify-content: space-between; margin-top: 10px;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">LoG-1</div> <div style="text-align: center;">P</div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">or</div> <div style="text-align: center;">           ▲ ▼         </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">nor</div> <div style="text-align: center;">           ▲ ▼         </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">And</div> <div style="text-align: center;">           ▲ ▼         </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">nAnd</div> <div style="text-align: center;">           ▲ ▼         </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">P</div> </div> </div> <p style="font-size: 0.8em; margin-top: 10px;">Here, the switching behaviour of the relay is defined via a logic link, the following schema describes these functions with inclusion of <i>AL-1</i> and <i>AL-2</i>.</p> <table border="1" style="width: 100%; border-collapse: collapse; font-size: 0.8em;"> <tbody> <tr> <td style="width: 15%; text-align: center;">or</td> <td style="width: 35%;"><math>A1 \vee A2</math></td> <td style="width: 50%;">As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</td> </tr> <tr> <td style="text-align: center;">nor</td> <td><math>\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}</math></td> <td>The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</td> </tr> <tr> <td style="text-align: center;">And</td> <td><math>A1 \wedge A2</math></td> <td>The relay operates only, if all selected alarms are active.</td> </tr> <tr> <td style="text-align: center;">nAnd</td> <td><math>\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}</math></td> <td>As soon as a selected alarm is not activated, the relay operates.</td> </tr> </tbody> </table> <p style="font-size: 0.8em; margin-top: 10px;">With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>	or	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.	nor	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.	And	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.	nAnd	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.
or	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.											
nor	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.											
And	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.											
nAnd	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.											
<div style="border: 1px solid black; padding: 5px; text-align: center;">CoM-1</div> <div style="text-align: center;">       ▲ ▼     </div>	<p><b>Alarms for relay 1, CoM-1:</b> Default: <i>A.1</i></p> <div style="display: flex; align-items: center; justify-content: space-between; margin-top: 10px;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">CoM-1</div> <div style="text-align: center;">P</div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">A.1</div> <div style="text-align: center;">           ▲ ▼         </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">A.2</div> <div style="text-align: center;">           ▲ ▼         </div> <div style="margin: 0 10px;">....</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">A.1234</div> <div style="text-align: center;">           ▲ ▼         </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">P</div> </div> </div> <p style="font-size: 0.8em; margin-top: 10px;">The allocation of the alarms to relay 1 happens via this parameter, one alarm or a group of alarms can be chosen. This parameter is only available if <i>LoGiC</i> was selected under <i>REL-1</i>. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>												



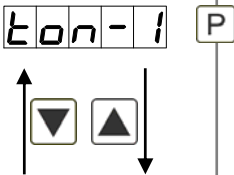

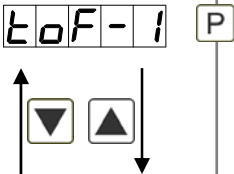

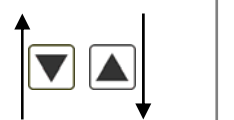
Menu level	Parameterisation level												
<div><div>REL-2</div><div>P</div></div> <div><div>↑</div><div>↓</div><div>▽</div><div>▲</div></div>	<div><div>Alarm relay 2, REL-2:</div><div>Default: AL-2</div></div> <div><div>AL-1</div><div>....</div><div>AL-4</div><div>▲</div><div>▼</div><div>AL-n1</div><div>....</div><div>AL-n4</div><div>▲</div><div>▼</div></div> <div><div>LOGIC</div><div>▲</div><div>▼</div><div>OFF</div><div>▲</div><div>▼</div><div>On</div><div>▲</div><div>▼</div><div>P</div></div> <div><div>Each setpoint (optional) can be linked up via 4 alarms (by default). This can either be inserted at activated alarms <i>AL-1/4</i> or deactivated alarms <i>ALN1/4</i>. If <i>LOGIC</i> was selected, logical links are available in the menu level <i>LOG-1</i> and <i>COM-1</i>. Access to these two menu levels is via <i>LOGIC</i>, at all other selected functions, these two parameters are overleaped. Via <i>ON/OFF</i> the setpoints can be activated/deactivated, in this case the output and the setpoint display are set/not set on the front of the device. With [P] the selection is confirmed and the device changes into menu level.</div></div>												
<div><div>LOG-2</div><div>P</div></div> <div><div>↑</div><div>↓</div><div>▽</div><div>▲</div></div>	<div><div>Logic relay 2, LOG-2</div><div>Default: OR</div></div> <div><div>or</div><div>▲</div><div>▼</div><div>nor</div><div>▲</div><div>▼</div><div>And</div><div>▲</div><div>▼</div><div>nAnd</div><div>▲</div><div>▼</div><div>P</div></div> <div><div>Here, the switching behaviour of the relay is defined via a logic link, the following schema describes these functions with inclusion of <i>AL-1</i> and <i>AL-2</i>.</div><table><tr><td><div>or</div></td><td><div><math>A1 \vee A2</math></div></td><td><div>As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</div></td></tr><tr><td><div>nor</div></td><td><div><math>\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}</math></div></td><td><div>The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</div></td></tr><tr><td><div>And</div></td><td><div><math>A1 \wedge A2</math></div></td><td><div>The relay operates only, if all selected alarms are active.</div></td></tr><tr><td><div>nAnd</div></td><td><div><math>\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}</math></div></td><td><div>As soon as a selected alarm is not activated, the relay operates.</div></td></tr></table><div><div>With [P] the selection is confirmed and the device changes into menu level.</div></div></div>	<div>or</div>	<div><math>A1 \vee A2</math></div>	<div>As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</div>	<div>nor</div>	<div><math>\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}</math></div>	<div>The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</div>	<div>And</div>	<div><math>A1 \wedge A2</math></div>	<div>The relay operates only, if all selected alarms are active.</div>	<div>nAnd</div>	<div><math>\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}</math></div>	<div>As soon as a selected alarm is not activated, the relay operates.</div>
<div>or</div>	<div><math>A1 \vee A2</math></div>	<div>As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</div>											
<div>nor</div>	<div><math>\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}</math></div>	<div>The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</div>											
<div>And</div>	<div><math>A1 \wedge A2</math></div>	<div>The relay operates only, if all selected alarms are active.</div>											
<div>nAnd</div>	<div><math>\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}</math></div>	<div>As soon as a selected alarm is not activated, the relay operates.</div>											
<div><div>COM-2</div><div>P</div></div> <div><div>↑</div><div>↓</div><div>▽</div><div>▲</div></div>	<div><div>Alarms for relay 2, COM-2:</div><div>Default: A.2</div></div> <div><div>A.1</div><div>▲</div><div>▼</div><div>A.2</div><div>▲</div><div>▼</div><div>....</div><div>A.1234</div><div>▲</div><div>▼</div><div>P</div></div> <div><div>The allocation of the alarms to relay 1 happens via this parameter, one alarm or a group of alarms can be chosen. This parameter is only available if <i>LOGIC</i> was selected under <i>REL-1</i>. With [P] the selection is confirmed and the device changes into menu level.</div></div>												
<div><div>RET</div></div> <div><div>↑</div><div>↓</div><div>▽</div><div>▲</div></div>	<div><div>Back to menu group level, RET:</div></div> <div><div>With [P] the selection is confirmed and the device changes into menu group level „-REL-“.</div></div>												



### 5.4.8. Alarm parameters

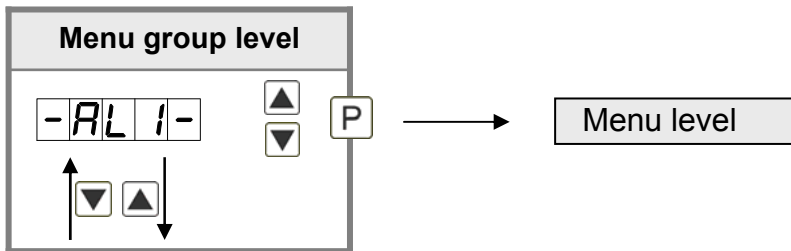


Menu level	Parameterisation level
	<p><b>Dependency alarm 1, ALRM.1:</b> Default: <i>ACTUA</i></p> <p> </p> <p>The dependency of alarm 1 can be related to special functions, in detail these are the current measuring value, the min-value, the max-value, the totaliser value/sum-value, the constant value or the difference between the current measurand and the constant value. If <i>HOLD</i> was selected, then the alarm is hold and processed just after deactivation of <i>HOLD</i>. <i>ENTER</i> causes the dependency either by pressing the <b>[O]</b>-key on the front of the housing or by an external signal via the digital input. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p> <p><b>Example:</b></p> <p>By using the maximum value <i>ALARM.1 = MAXUA</i> in combination with a threshold monitoring <i>FU-1 = HIGH</i>, an alarm confirmation can be realised. Use the navigation keys, the 4th key or the digital input for confirmation.</p>
	<p><b>Threshold values / limit values, LI-1:</b> Default: <i>2000</i></p> <p> </p> <p>The limit value defines the threshold, that activates/deactivates an alarm.</p>
	<p><b>Hysteresis for threshold values, HY-1:</b> Default: <i>00000</i></p> <p> </p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>

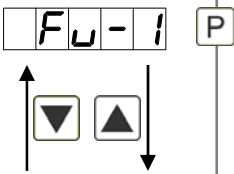

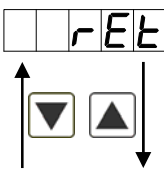
Menu level	Parameterisation level
	<p><b>Function for threshold value undercut/exceedance, <i>FU-1</i>:</b> Default: <i>HIGH</i></p> <p>  </p> <p>A limit value undercut is selected with <i>LOW</i> (for LOW = lower limit value), a limit value exceedance with <i>HIGH</i> (for HIGH = higher limit value). If e.g. limit value 1 is on a threshold level of 100 and allocated with function <i>HIGH</i>, an alarm is activated by reaching the threshold level. If the threshold value was allocated to <i>LOW</i>, an alarm will be activated by undercutting the threshold value, as long as the hysteresis is zero.</p>
	<p><b>Switching-on delay, <i>TON-1</i>:</b> Default: <i>000</i></p> <p>  </p> <p>For limit value 1 one can preset a delayed switching-on of 0-100 seconds.</p>
	<p><b>Switching-off delay, <i>TOF-1</i>:</b> Default: <i>000</i></p> <p>  </p> <p>For limit value 1 one can preset a delayed switching-off of 0-100 seconds.</p>
	<p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With [<b>P</b>] the selection is confirmed and the device changes into menu group level „-AL1-“.</p>

The same applies for *AL2* to *AL8*.

## 5.4.9. Totaliser (Volume metering)

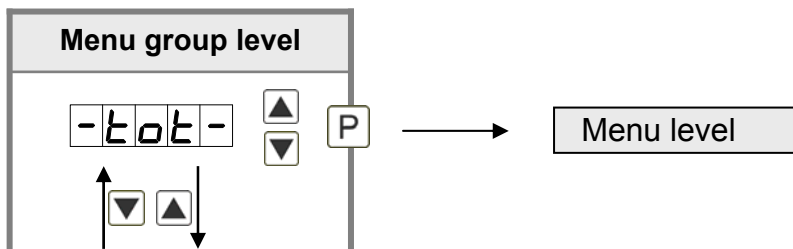

Menu level	Parameterisation level
	<b>Totaliser state, <i>TOTAL</i>:</b> Default: <i>OFF</i> <p>The totaliser makes measurements on a time base of e.g. l/h possible, at this the scaled input signal is integrated by a time and steadily (select <i>STEAD</i>) or temporarily (select <i>TEMP</i>) saved. Select the constant storage for consumption measurements and the quick storage for frequently filling processes. If <i>OFF</i> is selected, the function is deactivated. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>
	<b>Time base, <i>T.BASE</i>:</b> Default: <i>SEC</i> <p>Under this parameter the time base of the measurement can be preset in seconds, minutes or hours.</p>
	<b>Totaliser factor, <i>FACTO</i>:</b> Default: <i>1E0</i> <p>At this, the factor (1E0...1E6) respectively the divisor for the internal calculation of the measuring value is assigned.</p>
	<b>Setting up the decimal point for the totaliser, <i>TOT.DT</i>:</b> Default: <i>0</i> <p>The decimal point of the device can be adjusted with the navigation keys <b>[▲]</b> <b>[▼]</b>. With <b>[P]</b> the selection is confirmed and the device changes into menu level.</p>

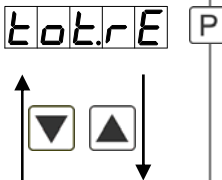Menu level	Parameterisation level
	<p><b>Totaliser reset, <i>TOT.RE</i>:</b> Default: <i>000</i></p>  <p>The reset value is adjusted from the smallest to the highest digit with the navigation keys [▲] [▼] and digit per digit confirmed with [P]. After the last digit, the display switches back to the menu level. The activator for the reset is parameter driven via the 4<sup>th</sup> key or via the optional digital input.</p>
	<p><b>Back to menu group level, <i>RET</i>:</b></p> <p>With [P] the selection is confirmed and the device changes into menu group level „-TOT-“.</p>

Programming interlock:

Menu group level



Description see page 13, menu level *RUN*

6. Reset to default values

To return the unit to a **defined basic state**, a reset can be carried out to the default values.

The following procedure should be used:


- Switch off the power supply
  - Press button [P]
  - Switch on voltage supply and press [P]-button until „- - - -“ is shown in the display.
- With reset, the default values of the program table are loaded and used for subsequent operation. This puts the unit back to the state in which it was supplied.

**Caution! All application-related data are lost.**

## 7. Alarms / Relays


This device has 4 virtual alarms that can monitor one limit value in regard of an undercut or exceedance. Each alarm can be allocated to an optional relay output S1-S2; furthermore alarms can be controlled by events like e.g. hold value or min/max-value.

Function principle of alarms / relays	
<b>Alarm / Relay x</b>	Deactivated, instantaneous value, min/max-value, hold value, totaliser value, sliding average value, constant value, difference between instantaneous value and constant value or an activation via the digital input
<b>Switching threshold</b>	Threshold / limit value of the change-over
<b>Hysteresis</b>	Broadness of the window between the switching thresholds
<b>Working principle</b>	Operating current / Quiescent current

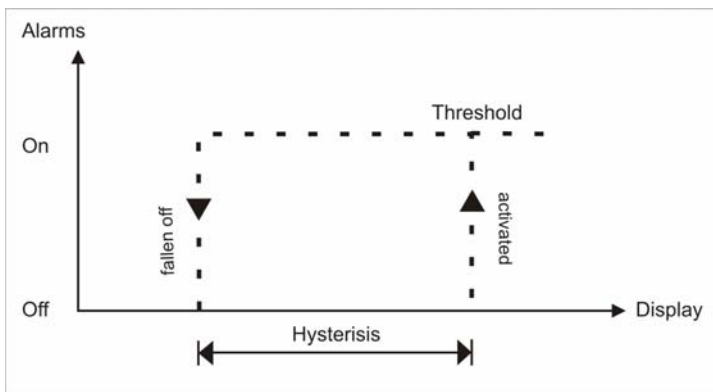


### Operating current

By operating current the alarm S1-S2 is **off** below the threshold and **on** on reaching the threshold.

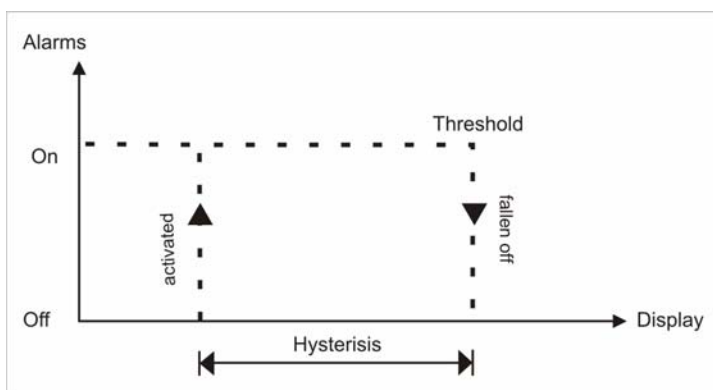

### Quiescent current

By quiescent current the alarm S1-S2 is **on** below the threshold and switched **off** on reaching the threshold.

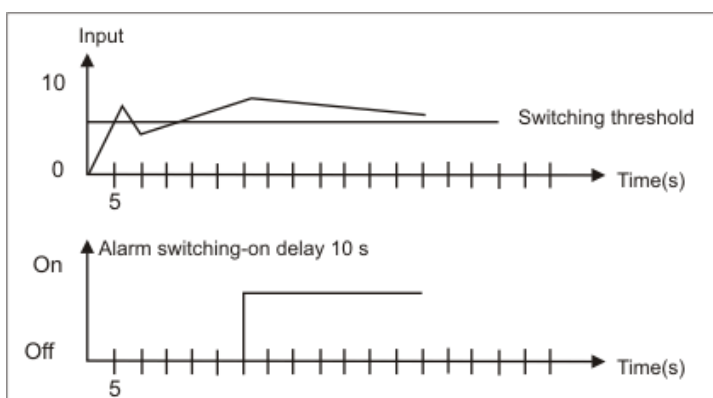

### Switching-on delay


The switching-on delay is activated via an alarm and e.g. switched 10 seconds after reaching the switching threshold, a short-term exceedance of the switching value does not cause an alarm, respectively does not cause a switching operation of the relay. The switching-off delay operates in the same way, keeps the alarm / the relay switched longer for the parameterised time.

## 8. Interfaces

### Connection RS232


Digital device M3

PC - 9-pole Sub-D-plug

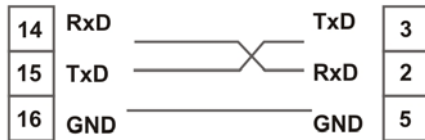

### Connection RS485

Digital device M3

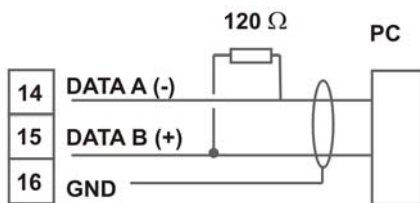

The interface **RS485** is connected via a screened data line with twisted wires (Twisted-Pair). On each end of the bus segment a termination of the bus lines needs to be connected. This is necessary to ensure a secure data transfer to the bus. For this a resistance (120 Ohm) is interposed between the lines Data B (+) and Data A (-).

## 9. Programmer examples

### Examples: Adjustment according to number of sprockets at unknown rotation speed.

- nearly 100% of the rotation speeds are in the range of 0 to 30.000 r.p.m.
- the number of sprockets varies (without gearing) between 1 and 100
- in automation, the frequency supply never exceeds 10 kHz (rather 3 kHz)

**Assume a rotation speed of 60 r.p.m. at 1 Hz, whereat the real frequency value will not be considered.**

Our example complies with a number of sprockets of 64.

### Setting up the advice

Based on the default settings of the display, the following parameters need to be changed:

Parameter	Settings	Description
<input type="checkbox"/> TYPE	FREQU	Applying of the measuring signal is not applicable.
<input type="checkbox"/> RANGE	1E3	Complies with 9.9999 Hz
<input type="checkbox"/> End	6	Assumed final value
<input type="checkbox"/> EndA	0.0064	Complies with 64 sprockets

If the frequency needs to be displayed with a position after decimal point, then a 60 has to be selected as final value for this adjustment.

Parameter	Settings	Description
<input type="checkbox"/> TYPE	FREQU	Applying of the measuring signal is not applicable.
<input type="checkbox"/> RANGE	1E3	Complies with 9.9999 Hz
<input type="checkbox"/> End	60	Assumed final value
<input type="checkbox"/> dot	0.0	1 position after decimal point
<input type="checkbox"/> EndA	0.0064	Complies with 64 sprockets

**Example: Rotation speed of a machine shaft**

There are 4 sprockets on one machine shaft. Applied in an angle of 90° to each other and to the rotation speed measurement. The sprockets are collected via a proximity switch and evaluated by the frequency device, which shall display the rotation speed in U/min. 0...3600 U/min is preset as rotation speed range of the machine.

**Calculation of the input frequency**

Number of sprockets = 4  
Rotation speed = 3600 U/min

$$\text{Final frequency [Hz]} = \frac{\text{Final rotation speed } \left[\frac{U}{\text{min}}\right]}{60 \left[\frac{s}{\text{min}}\right] \times 1U} \times \text{Number of sprockets}$$

$$\text{Final frequency [Hz]} = \frac{3600 \frac{U}{\text{min}}}{60 \frac{s}{\text{min}} \times 1U} \times 4 = 240 \text{ Hz}$$

**Setting up the device**

Based on the default settings of the device, following parameters need to be changed:

Parameter	Settings	Description
<input type="text" value="TYPE"/>	<input type="text" value="FREQU"/>	As the input frequency is known, the device does not need to be applied to the measuring section.
<input type="text" value="RANGE"/>	<input type="text" value="100E0"/>	The final frequency is in the range of 100.00 to 999.99 Hz.
<input type="text" value="End"/>	<input type="text" value="3600"/>	A rotation speed of 3600 shall be displayed as final value.
<input type="text" value="EndA"/>	<input type="text" value="24000"/>	The final frequency for display value 3600 is 24.00 Hz.



## 10. Technical data

Panel meter housing	
Dimensions	96x96x56 mm (BxHxD)
	96x96x82 mm (BxHxD) incl. plug-in terminal
Panel cut-out	91.0 <sup>+0.6</sup> x 91.0 <sup>+0.6</sup> mm
Wall thickness	up to 10 mm
Fixing	Screw elements
Material	LEXAN 500R, black
Sealing material	EPDM, 65 Shore, black
Protection class	Standard IP65 (front), IP00 (back side)
Weight	approx. 330 g
Connection	plug-in terminal; wire-cross section up to 2.5 mm <sup>2</sup>
Display	
Display height	14 mm
Segment colour	red
Display range	-19999 to 99999
Setpoints	one LED per setpoint
Overflow	horizontal bars at the top
Underflow	horizontal bars at the top
Display time	0.1 up to 10.0 seconds
Bargraph	55 segments in 270° angle
Bargraph colour	red
Input	
Transmitter	Namur, 3-wire initiator, impulse input, TTL
High/Low level	> 15 V / < 4 V – U <sub>in</sub> max. 30 V
TTL level	> 4,6 V / < 1,9 V
Input frequency	0.01 – 999.99 kHz
Input resistance	R <sub>i</sub> at 24 V / 4 kΩ / R <sub>i</sub> at Namur 1,8 kΩ
Frequency filter	none, 100 Hz, 50 Hz, 20 Hz, 10, Hz, 5 Hz, 2 Hz
Accuracy	
Temperature drift	50 ppm / K
Measuring time	0.1...10.0 seconds, respectively optional impulse delay of 250 seconds
Measuring error	0.05% of measuring range ± 1 digit
Resolution	approx. 19 bit per measuring range

<b>Output</b>	
Sensor supply	24 VDC / 50 mA; 12 VDC / 50 mA; 5 VDC / 20 mA
Analog output	0/4-20 mA / burden 350 $\Omega$ or 0-10 VDC / 10 kOhm, 16 bit
Switching output	
Relay with change-over contact	250 VAC / 5 AAC; 30 VDC / 5 ADC
Switching cycles	30 x 10 <sup>3</sup> at 5 AAC, 5 ADC ohm resistive burden 10 x 10 <sup>6</sup> mechanically Division according to DIN EN50178 / Characteristics according to DIN EN60255
<b>Interface</b>	
Protocol	Modbus with ASCII or RTU-protocol
RS232	9.600 Baud, no parity, 8 Databit, 1 Stopbit, wire length max. 3 m
RS485	9.600 Baud, no parity, 8 Databit, 1 Stopbit, wire length max. 1000 m
<b>Power supply</b>	
	100-240 VAC 50/60 Hz, DC $\pm$ 10%, max. 15 VA 10-40 VDC; 18-30 VAC 50/60 Hz, max. 15 VA
<b>Memory</b>	
	EEPROM
Data life	$\geq$ 100 years at 25°C
<b>Ambient conditions</b>	
Working temperature	0°...50°C for panel meters, -20°...60°C for built-on devices
Storing temperature	-20...80°C
Weathering resistance	relative humidity 0-80% on years average without dew
Height	up to 2000 m above sea level
<b>EMV</b>	
	EN 61326
<b>CE-sign</b>	
	Conformity according to directive 2004/108/EG
<b>Safety standard</b>	
	Accroding to low voltage directive 2006/95/EG EN 61010; EN 60664-1

## 11. Safety advices

Please read the following safety advices and the assembly *chapter 1* before installation and keep it for future reference.

### Proper use

The **MB2-2F-device** is designed for the evaluation and display of sensor signals.



**Danger! Careless use or improper operation can result in personal injury and/or cause damage to the equipment.**

### Control of the device

The panel meters are checked before dispatch and sent out in perfect condition. Should there be any visible damage, we recommend close examination of the packaging. Please inform the supplier immediately of any damage.



### Installation

The **MB2-2F-device** must be installed by a suitably **qualified specialist** (e.g. with a qualification in industrial electronics).

### Notes on installation

- There must be no magnetic or electric fields in the vicinity of the device, e.g. due to transformers, mobile phones or electrostatic discharge.
- The **fuse rating** of the supply voltage should not exceed a value of **6A N.B. fuse**.
- Do not install **inductive consumers** (relays, solenoid valves etc.) near the device and **suppress** any interference with the aid of RC spark extinguishing combinations or free-wheeling diodes.
- Keep input, output and supply lines separate from one another and do not lay them parallel with each other. Position “go” and “return lines” next to one another. Where possible use twisted pair. So, you receive best measuring results.
- Screen off and twist sensor lines. Do not lay current-carrying lines in the vicinity. Connect the **screening on one side** on a suitable potential equaliser (normally signal ground).
- The device is not suitable for installation in areas where there is a risk of explosion.
- Any electrical connection deviating from the connection diagram can endanger human life and/or can destroy the equipment.
- The terminal area of the devices is part of the service. Here electrostatic discharge needs to be avoided. Attention! High voltages can cause dangerous body currents.
- Galvanic isolated potentials within one complex need to be placed on a appropriate point (normally earth or machines ground). So, a lower disturbance sensibility against impacted energy can be reached and dangerous potentials, that can occur on long lines or due to faulty wiring, can be avoided.

## 12. Error elimination

	Error description	Measures
1.	The device shows a permanent overflow 	<ul style="list-style-type: none"> <li>The input frequency is too high for the selected frequency range. Correct <b>RANGE</b> according to this.</li> <li>Disturbing pulses lead to an increased input frequency, activate <b>FI.FRQ</b> at smaller frequencies or shield the sensor line.</li> <li>A mechanic switching contact chatters. Activate the frequency filter <b>FI.FRQ</b> with 10 or 20 kHz.</li> <li>The display was taught faulty under <b>TYPE = SENS.F</b>. Error elimination see below.</li> </ul>
2.	The device shows a permanent underflow. 	<ul style="list-style-type: none"> <li>An offset frequency <b>OFFSA</b> bigger than 0 Hz respectively a „living zero“ was selected, in which no frequency is aligned. Check the sensor lines or set the <b>OFFSA</b> onto 0 Hz.</li> <li>The display underflow <b>DL.UND</b> was selected too high. The according parameter needs to be adapted.</li> <li>The device was taught faulty under <b>TYPE = SENS.F</b>. Error elimination see below.</li> </ul>
3.	The displayed values switches sporadical.	<ul style="list-style-type: none"> <li>Disturbances lead to short-term display switches. For smaller frequencies use the frequency filter <b>FI.FRQ</b>, select a higher measuring time or use the sliding averaging.</li> <li>The sprockets that needs to be collected, are not evenly spread on a shaft or are not measured really exact. Use the sliding averaging <b>AVG</b> if necessary with the dynamic function <b>STEP</b>. The displayed value <b>DISPL</b> needs to be set on <b>AVG</b>.</li> </ul>
4.	The display remains on zero.	<ul style="list-style-type: none"> <li>The sensor was not connected properly. Check the connection lines and if necessary the sensor supply. Best directly on the screw terminals of the device!</li> <li>A PNP- respectively NPN-output does not reach the required threshold. Check the voltage between terminal 2 and 3 with a Multimeter. Depending on signal form it generally should be between 4 V and 15 V. The thresholds can be checked more safely with an oscilloscope. If necessary include an external pull-up or pull-down.</li> <li>A Namur-sensor does not react. Check the distance between the sensor and the sprocket / survey mark and if necessary measure the voltage between 1 and 3. In open condition the input voltage needs to be smaller than 2,2 V sein and in active condition bigger than 4,6 V.</li> <li>The selected range of the input frequency is too high. Reduce the frequency range <b>RANGE</b> to a smaller value.</li> <li>The activated frequency filter <b>FI.FRQ</b> suppresses the relevant pulses. Increase the filter frequency <b>FI.FRQ</b> or use the adaption of the key proportion <b>FI.RAT</b>. If this should not work, temporarily deactivate the frequency filter with <b>FI.FRQ = NO</b>.</li> <li>The device was taught faulty under <b>TYPE = SENS.F</b>. Change into <b>TYPE FREQU</b> and preset the assumed frequency range <b>RANGE</b> and the according initial and final values <b>END</b>, <b>OFFS</b>, <b>ENDR</b>, and <b>OFFSA</b>. So you can check if a frequency signal was connected to the input.</li> </ul>
5.	The device shows <b>HELP</b> in the 7-segment display	<ul style="list-style-type: none"> <li>The device located an error in the configuration memory, execute a reset to the default values and set up the device according to your application.</li> </ul>
6.	Program numbers for the parameterisation of the input are not available	<ul style="list-style-type: none"> <li>The programming interlock is activated.</li> <li>Enter correct code.</li> </ul>
7.	The device shows <b>ERR1</b> in the 7-segment display	<ul style="list-style-type: none"> <li>Contact the manufacturer if errors of this kind occur.</li> </ul>
8.	The device does not react as expected.	<ul style="list-style-type: none"> <li>If you are not sure, that the device has been parameterised before, restore the state of delivery as described in <i>chapter 6</i>.</li> </ul>